


Premier Wired Model

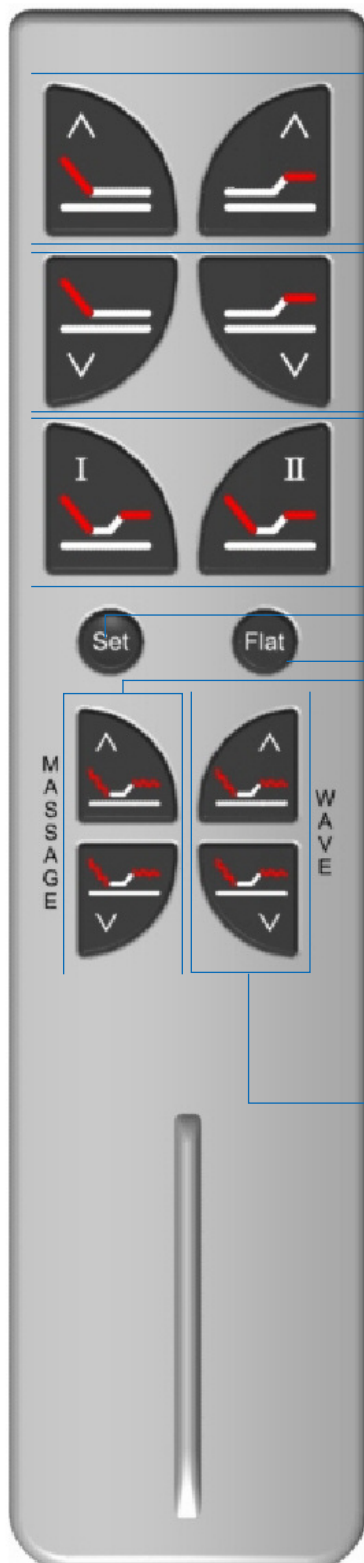

A. Head up/foot up buttons:

Press and hold to adjust the head & foot section of the bed to the desired positions.

B. Head down/foot down buttons:

Press and hold to adjust the head & foot section of the bed to the desired positions.

C. Custom position memory buttons:

Pressing I or II will make bed move to preset memory positions as well as massage settings. When bed is going to memory position, pressing any button on handset will stop the movement

D. SET:

Once the desired position of head, foot, massage and wave have been made, press the SET button, release and then press FAVORITE POSITION I or II button to set the position.

E. FLAT:

To level the bed to the sleeping position, press the FLAT button. This also turns off the massage. To stop the automatic movement, press any key

F. Massage:

Slowly increases or decreases the intensity of the massage for as long as the appropriate button is pressed

G. Wave up/down buttons:

Once the massage is activated and the wave feature is selected, these buttons increase or decrease the speed of the wave.

Plug-in for handset:

